

# 60mA LOOP SENSE KEYING CIRCUIT

\* FOR USE WITH CENTRAL ELECTRONICS 100V TRANSMITTER CONNECT OUTPUT TO FSK-1 ON REAR OF TRANSMITTER  
 \* INVERTED OUTPUT CIRCUIT IS NOT REQUIRED. IF NOT USED, DO NOT CONNECT THE COLLECTOR OF THE OPTO-COUPLER TO ANY PULL-UP CIRCUIT

CIRCUIT: GIL SMITH  
 DRAWING: EUGENE HERTZ

Rev 1.1

